

Important Information Safety Instructions

When correctly installed in compliance to installations and adhering to all current electrical, mechanical and manufacturer regulations, your automation system will provide a high degree of safety and problem free operation.



Please take note of the following warnings that must be followed in order to prevent accidents during your gate's operation:

- Do not allow children to play near the gates.
- Keep all remote control operating devices out of the reach of children.
- Do not pass through the gates whilst in operation. Wait until the gates are fully open before passing through.
- Do not stop unnecessarily when passing through the gates.
- Do not operate the gate(s) by remote control unless the gate(s) is in view.
- Do not attempt to block or interfere with the gates movement during operation.
- Under no circumstances should you attempt to modify the gates or automation system.
- Ensure that your automatic gates are serviced at 6 month to 12 month intervals (dependent on number of openings) by your installation/maintenance company.
- Report any signs of malfunction to your installation/maintenance company immediately.
- In the case of malfunction, isolate the power supply, release any additional locking mechanism, manually open the gates (see instructions inside manual) and call your installation/maintenance company.
- If you are in any doubt regarding the operation of your gate, call your installation/maintenance company.

MANUAL OPENING

If the gate has to be operated manually due to a power failure or malfunction, use the release device as follows:

1. Open control enclosure using the two handle locks
2. Open the lock cover plate on the motor and insert the key supplied in the lock (see figure 1)
3. Turn the mains isolator "off".
4. Turn the key clockwise and pull the release lever as shown in figure 2.
5. Close control enclosure and lock.
6. The gate can now be manually opened or closed.

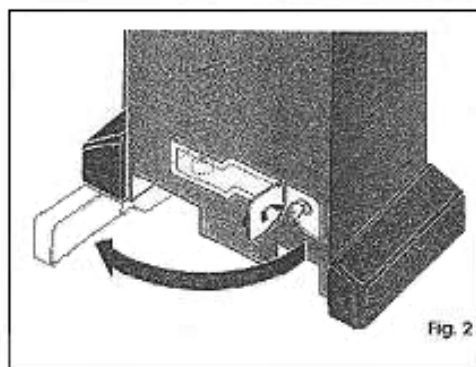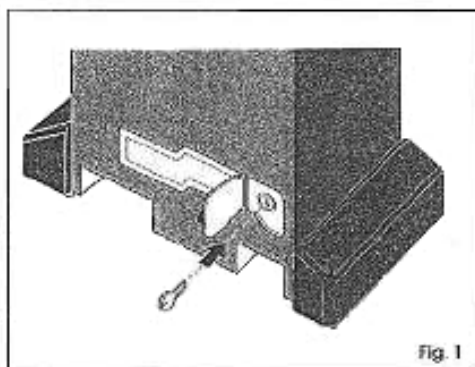

To return the operator to automatic once the power is re-stored or the malfunctions mended proceed as follows:

1. Open the control enclosure using the two handle locks.
2. Re-close the release lever with the gate in the closed position.
3. Turn the key anti-clockwise.
4. Remove the key and close lock cover plate.
5. Slightly move the gate until the release device engages
6. Turn the isolator "ON"
7. Close control enclosure and lock.