

Important Information Safety Instructions

When correctly installed in compliance to installations and adhering to all current electrical, mechanical and manufacturer regulations, your automation system will provide a high degree of safety and problem free operation.

Please take note of the following warnings that must be followed in order to prevent accidents during your gate's operation:

- Do not allow children to play near the gates.
- Keep all remote control operating devices out of the reach of children.
- Do not pass through the gates whilst in operation. Wait until the gates are fully open before passing through.
- Do not stop unnecessarily when passing through the gates.
- Do not operate the gate(s) by remote control unless the gate(s) is in view.
- Do not attempt to block or interfere with the gates movement during operation.
- Under no circumstances should you attempt to modify the gates or automation system.
- Ensure that your automatic gates are serviced at 6 month to 12 month intervals (dependent on number of openings) by your installation/maintenance company.
- Report any signs of malfunction to your installation/maintenance company immediately.
- In the case of malfunction, isolate the power supply, release any additional locking mechanism, manually open the gates (see instructions inside manual) and call your installation/maintenance company.
- If you are in any doubt regarding the operation of your gate, call your installation/maintenance company.

MANUAL OPENING

If the gate has to be operated manually due to a power failure or malfunction, use the release device as follows:

In the event of power failure, the motor lever is forced out of the dead centre position by springs in the system, and the barrier may be operated by hand by applying sufficient pressure to the barrier boom.