

Important Information Safety Instructions

When correctly installed in compliance to installations and adhering to all current electrical, mechanical and manufacturer regulations, your automation system will provide a high degree of safety and problem free operation.

Please take note of the following warnings that must be followed in order to prevent accidents during your gate's operation:

- Do not allow children to play near the gates.
- Keep all remote control operating devices out of the reach of children.
- Do not pass through the gates whilst in operation. Wait until the gates are fully open before passing through.
- Do not stop unnecessarily when passing through the gates.
- Do not operate the gate(s) by remote control unless the gate(s) is in view.
- Do not attempt to block or interfere with the gates movement during operation.
- Under no circumstances should you attempt to modify the gates or automation system.
- Ensure that your automatic gates are serviced at 6 month to 12 month intervals (dependent on number of openings) by your installation/maintenance company.
- Report any signs of malfunction to your installation/maintenance company immediately.
- In the case of malfunction, isolate the power supply, release any additional locking mechanism, manually open the gates (see instructions inside manual) and call your installation/maintenance company.
- If you are in any doubt regarding the operation of your gate, call your installation/maintenance company.


MANUAL OPENING

If the gate has to be operated manually due to a power failure or malfunction, use the release device as follows:

In case of emergency, for example when the electrical power is disconnected, open the electric lock by means of the appropriate key to release the gate, and open the leaf manually; you may also reach the release knob to facilitate the manoeuvre. In order to get access to the release knob, move the small cap in the direction indicated by the arrow (fig. 18) to reveal the lock, insert the key, turn it clockwise by 90° and lift the entire release cover by pulling with the key. The knob must be allowed to turn as far as possible in the direction indicated by the arrows.

OPEN to release: the gate can be opened manually with ease.

CLOSE to lock: turn the knob clockwise until it is completely locked, and so restore the actuator electrical operation.

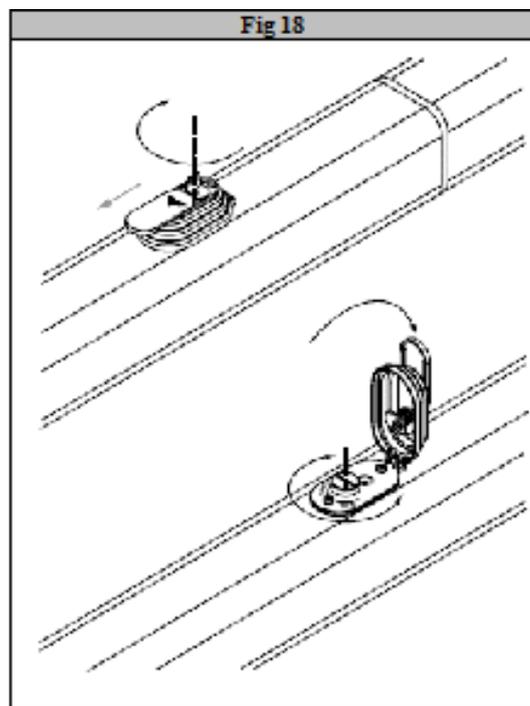

Please note: The gate must be pushed slowly in manual to avoid oil leakage.